



TITAN LIGHTING STANDS

ST-DJ01



USER S MANUAL

DESCRIPTION:

Thank you for choosing a ST-DJ01 light stand system. The ST-DJ01 is a triangle stand truss system. This medium duty truss lighting stand package includes 2 high quality stands (ST-02), 2X 5' (1.5M) triangle truss sections that create a 5' (1.5M) or 10' (3M) span and 2x T-truss adaptor (ST-SA01). That you may easily mount your truss to the stands. you can mount up to 220 lbs (100kg), truss pipes are 1" in diameter. Truss sections are 6" in overall width.

SPECIFICATIONS:

Maximum load: 220 lbs (100 kg)
Maximum height: 9'8" (3 m)
Minimum height: 5'4" (1.65 m)
Weight Stand: 24 lbs (11 kg) each
Material: treated steel
Finish: epoxy black painting /electro-galvanised

INCLUDED:

- 2 X ST-02 Stand
- 2 x ST-SA01 T-Truss adapter
- 2 x TRT150 Truss triangular 5' (1.5 m)



UAHGV['IPUVTWEVKP U<

∇ Vq'cxqkf 'r tqdrgo u'c'eqo r gvgpv'r gtuqp'uj qwf 'l'pur gev'cm'tki i l'pi " j ctf y ctg.'ucpf u'cpf "gs wkr o gpv'dghqtg"gej "wug'cpf 'r gtkqf lecmf "f q"c" o clqt'l'pur gev'kp'hqt'uki pu'qh'y gct.'cdwug.'cpf 'i gpgtcr'cf gs wce{ .cu" y gm'cu'r gthqto "cp{ 'o cpw'cewtgt'tgeqo o gpf gf 'r t'gxgp'wxg" o cl'p'gpcpeg"qp'uej gf wrg

- Ensure that the stand is positioned on hard stable surface, in suitable location, on firm ground and clear of overhead obstacles.
- Stabilize legs before lifting the tower or any load.
- When outdoors, secure the tower with braces or cables, in case of wind.
- Check the cable, it should not show damaged or flattened areas nor broken strands.
- For Lifting the tower, turn the winch handle clockwise.
- For lowering the tower, turn the winch handle counter-clockwise.
- Loading on truss and stands should comply with rated weights.
- Lock all the safety mechanisms (safety pins, knobs)
- Loads must be centered & balanced on each lifting unit.
- Safety chains must be installed on each item attached to unit.
- Leave a safety perimeter with a radius 5ft greater than the maximum height of the stands during lifting and lowering of loads.
- During transport, close all the sections and lock the lifting carriage.
- Do not attempt to move the stand when loaded or in extended position.
- Servicing and repairs must be made by qualified persons.
- Cable, pulleys and telescopic masts must be inspected before each use. Any damaged cable must be replaced immediately.
- Annual inspection by an authorized technician is suggested

